

General

The **Structural Engineering Library Version 6.0 (SEL)** must be installed on each computer where it will be used. Whether you have individual licenses or a network license the software must reside on the actual computer to be used. You cannot launch it from another computer using a shortcut. Each license is allowed to have only one active user at a time.

When using our installation program you have two choices : "**Structural Engineering Library**" and "**Network License Manager**".

Use the "**Structural Engineering Library**" (**SEL**) choice to install the software on the computer where you will use it..

If you have a network license you will also be installing the "**Network License Manager**" (**NLM**). Before installing the NLM make sure ENERCALC has issued you a "network" license.

You can install the **SEL** on ANY computer where you might want to use. HOWEVER it must receive permission to actually run in non-demo mode in one of two ways :

"Activating" the software whether by "Internet Activation" or "Manual Activation"

This method involves pressing the [Internet Activation] button to receive activation approval from our server. Your license will be "Active" on the computer until you press [**Internet Deactivate**].

Example: You purchased a single license but have three work computers, a laptop and a home computer. You can install the **SEL** on all of those computers. You then use [Internet Activate] on one of the computers (say an office desktop) to allow it to run in fully registered mode.

Later if you want to use the software on your home computer simply [**Internet Deactivate**] on the work desktop and [**Internet Activate**] on your home computer.

With just a quick button press you can move the software's location anywhere you want..... even a client's office!

Manual activation is covered here : www.enercalc.com/pdf/EC_V6_Install_Info.pdf
An Internet connection is needed only for the brief moment of activating or deactivating.

Receiving permission from the Network License Manager

When you have a "Network" license you install the **NLM** on a computer that will be network accessible to any computer that you want to run the software. You then note the IP address and "port" that the **NLM** is listening to.

Then on the computer where you have the **SEL** installed you simply enter the IP and port location of the **NLM**. When you start the **SEL** it will find the **NLM** and receive approval to run (providing your user limit is not exceeded)

As long as the **SEL** can reach the **NLM** (meaning worldwide) you can run the software.

Security

SEL Version 6.0 has a new **Product Control Code (PCC)** that you copy & paste into the **SEL** or **NLM**. The **PCC** is an encrypted string that contains lots of information about your license.

For non-Network license you paste the **PCC** into the **SEL** and it decodes into the information needed to Internet Activate. For Network licenses you paste it into the **NLM** and it decodes into information needed to activate the **NLM**.