


# Moving your Active License between Computers

This writeup will assist you in moving your active software between computers.


When you originally activated the software most users use the **[Internet Activation]** ability of the software. To activate the software on another computer you must return this activation to our server so that it can be available to you on another computer you will [Internet Deactivate] the software.

**For Network License Relocation see next page.**


## For the Structural Engineering Library follow these steps

Start the **Structural Engineering Library**. You will probably see the “What would you like to do” screen seen to the right. You will need to press  button.

Then make the main menu selections “Settings” and underneath it “Licensing” as shown.

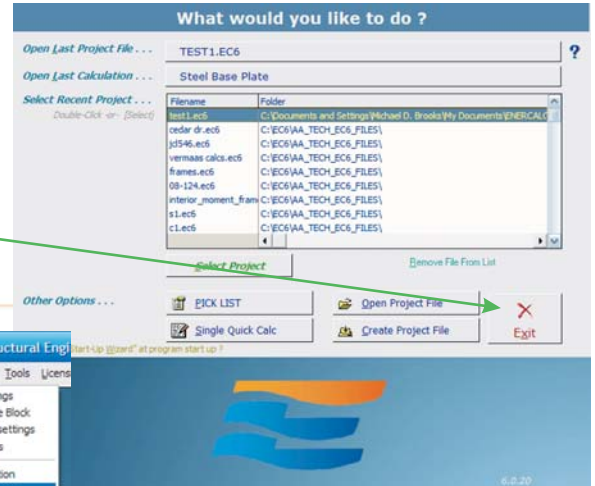


Then make the main menu selections “Settings” and underneath it “Licensing” as shown.

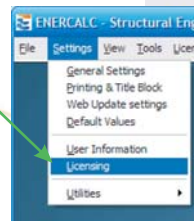


You will now see the “**License Information**” screen shown to the right.

Press the **[Internet Deactivate]** button you see on the screen to the right to return your “activation” to our server.


**Note!** You must allow the ENERCALC file “**EC6.EXE**” Internet access through your firewall or anti-virus software.

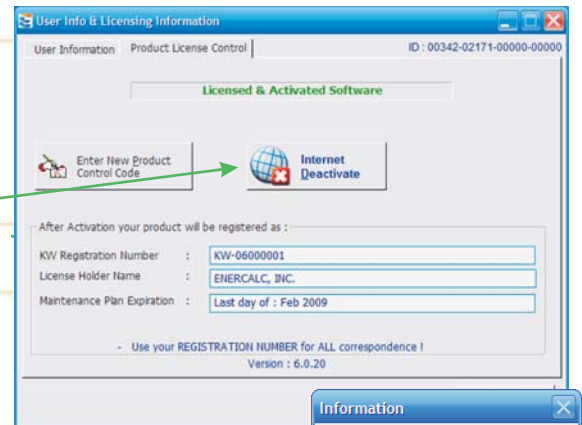

After a moment a “License Successfully Returned” window will be displayed.

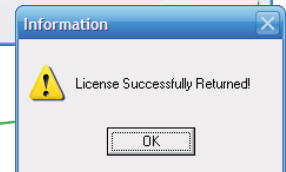

Your activation has now been returned to our server and you can go to another computer, install the **Structural Engineering Library**, and “activate” it using the **[Internet Activate]** selection on the licensing screen.

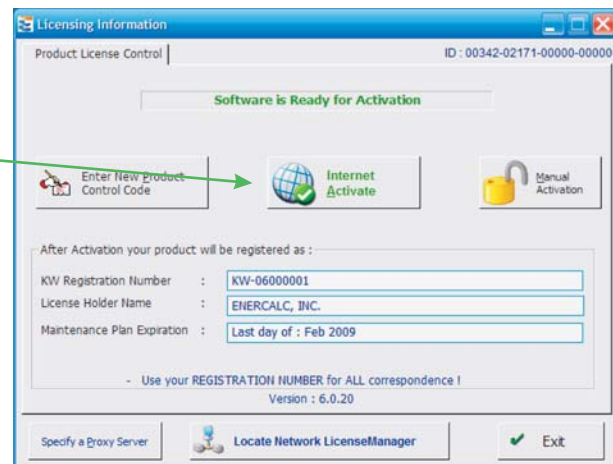

For full installation instructions use the “[Installation Information](#)” link on the “For Our Users” page at our web site. Here is the link : [www.enercalc.com/pdf/EC\\_V6\\_Install\\_Info.pdf](http://www.enercalc.com/pdf/EC_V6_Install_Info.pdf)

## Moving the Network License Manager to a new computer

(1) If your **Network License Manager** (NLM) is running as a service then stop the service. The most direct way to do this is:

- (a) Right-click the “**My Computer**” icon and select “**Manage**”
- (b) Expand the tree for “**Services & Applications**”
- (c) Click on “**Services**” that is indented in the tree
- (d) On the right side of the window look for the listed item **ENERCALC NLM**, right click on it, and select “**Stop**” from the popup menu.
- (e) You can now close the “**Services**” window.

(2) Start the **Network License Manager** using the link installed under the ENERCALC V 6 link in the Program group.

(3) Select the “**Licensing**” tab

(4) Press the [**Click Here to Activate -or- Deactivate Program**] button.

(5) On the next screen you will see a [**Internet Deactivate**] button. Pressing that button will deactivate the software on this computer and tell our activation server to free up your license so you can “**Internet Activate**” again.

After a momentary pause you will get a window confirming deactivation.

**Your activation has now been returned to our server** and you can go to another computer, install the **Network License Manager**, paste in the P.C. and “**activate**” it using the [**Internet Activate**] selection on the licensing screen.

For full installation instructions use the “[Installation Information](#)” link on the “**For Our Users**” page at our web site.

[www.enercalc.com/pdf/EC\\_V6\\_Install\\_Info.pdf](http://www.enercalc.com/pdf/EC_V6_Install_Info.pdf)

